



Steel components

sonnel.

Check the product every 6/12 months. In case of anomalies, prevent the usage of the hinge and

the installed product must be checked by professional per-

cod.	mm.	pz/pcs
278.65	65	20



Block-system



Components to weld

The weld must be adequately sized to support the applied forces and with suitable electrode material.
Adequately strengthen the areas anchoring the door and/

or structure / frame.



Responsibly dispose of the product and of its packaging respecting the local legislations of the Country of installation.

The company reserves the right to make technical as well as aesthetic changes without previous notice.

All responsibility due to an inappropriate use of the product is declined.

All drawings, photos, trademarks, logos, are of exclusive Combi Arialdo's property. All uses not expressively authorized by the company will be prosecuted.









